

Processor Clock Jumper Setting

	60 MHz DX-50	40 MHz DX-40 DX2-80	33.3 MHz (Default) SX-33 DX2-66 DX4-100	25 MHz SX-25 SX2-50 DX4-75
JK1				
JK2				
JK3				
JK4				

System Jumper Setting

JT1 JCK	<p>PCI Bus Clock Select</p> <p>(When the processor clock is less than or equal to 33 MHz.) PCI Bus Clock = Processor Clock (Default)</p> <p>(When the processor clock is greater than 33 MHz.) PCI Bus Clock = Processor Clock / 2</p>
------------	---

486-PIO-2

I/O Jumper Setting

CLR_P	<p>Password Clear Select</p> <p>(Default) Clear password</p>
VIDEO	<p>Display Type Select</p> <p>Monochrome/VGA (Default) CGA</p>
JX3	<p>Internal/External Keyboard Select</p> <p>Internal keyboard controller (Default) External keyboard controller</p>
	<p>Internal/External Keyboard Select</p> <p>Internal keyboard controller (Default)</p> <p>External keyboard controller</p>

486-PIO-2